 
 


Inline LP-Gas Filter Shut-off Valve, 12V

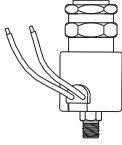


Part No.	Description
N3-0342	1/4" (6.4 mm) NPT Female Inlet, 1/4" (6.4 mm) Male Outlet
N3-0344-1A	Repair Kit

Dual Fuel Gasoline Inline Solenoid, 12V

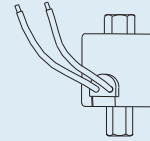


Part No.	Description
N3-0225-4	1/8" (3.2 mm) NPT Female Inlet and Outlet, Self-Grounded

 Inline LP-Gas Multi-fuel Shut-off with Magnet

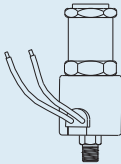


Part No.	Description
N3-0343	1/4" (6.4 mm) NPT Female Inlet, 1/4" (6.4 mm) Male Outlet
N3-0343-1	Repair Kit

 LP-Gas Multi-fuel Shut-off Solenoid Valve, 12V

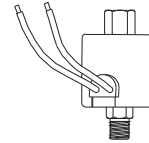


Part No.	Description
N3-0173-1	1/4" (6.4 mm) NPT Female Inlet, 1/4" (6.4 mm) Male Outlet

 LP-Gas Electric Filter Shut-off Solenoid Valve

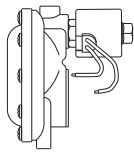


Part No.	Description
N3-0239	Use with N3-0083-1 Vacuum Switch (see Control Components section)
N3-0220-1	Repair Kit

 LP-Gas Multi-fuel Shut-off Solenoid Valve, 90°

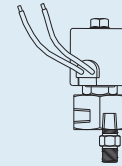

Part No.	Description
N3-0164-2	1/4" (6.4 mm) NPT Female Inlet & Outlet
N3-0362	3/8" (9.5 mm) NPT Female Inlet & Outlet
N3-0183	1/2" (12.7 mm) NPT Female Inlet & Outlet

 LP-Gas Multi-fuel Shut-off Solenoid Valve, 180°, 12V

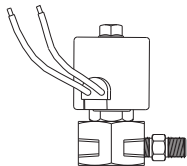

Part No.	Description
N3-0165-2	1/4" (6.4 mm) NPT Female Inlet & Outlet (Low Pres.)